 


QUICK REFERENCE

Before the initial use

■ Insert the batteries

 
 
- ① Turn off the unit, and then position your thumbs on the arrows in the battery compartment cover located on the bottom of the unit. Push the cover to the direction of the arrows to remove the cover.

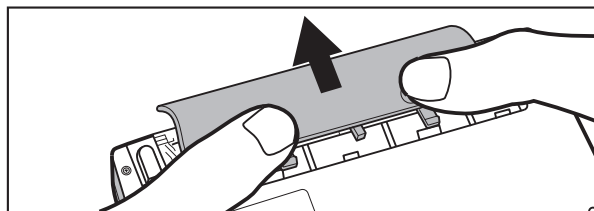

- ② Insert the two attached batteries, making sure that their poles (+ and -) point to the correct direction.

 
■ Reset the unit

- ① Press the reset button on the bottom of the unit.
- ② Press the open/close button while opening the top cover.
- ③ Use the contrast adjustment dial on the right side of the unit to adjust the contrast of the display.

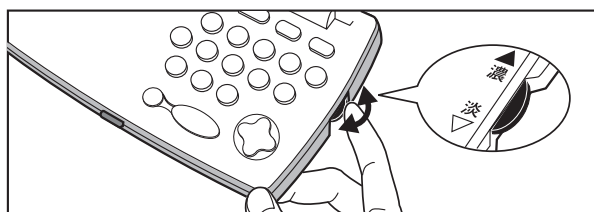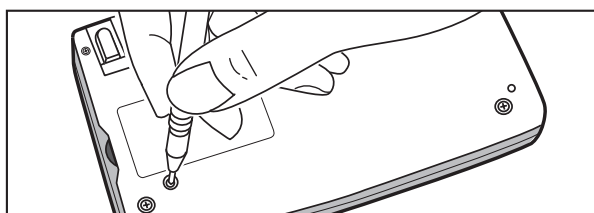

- ④ When the message “システムを初期化しますか？” (“Do you want to reset?”) appears, select “はい” (“Yes”), and then press the **訊 決定** key. In a short time, the menu screen appears and this unit will be ready to use.

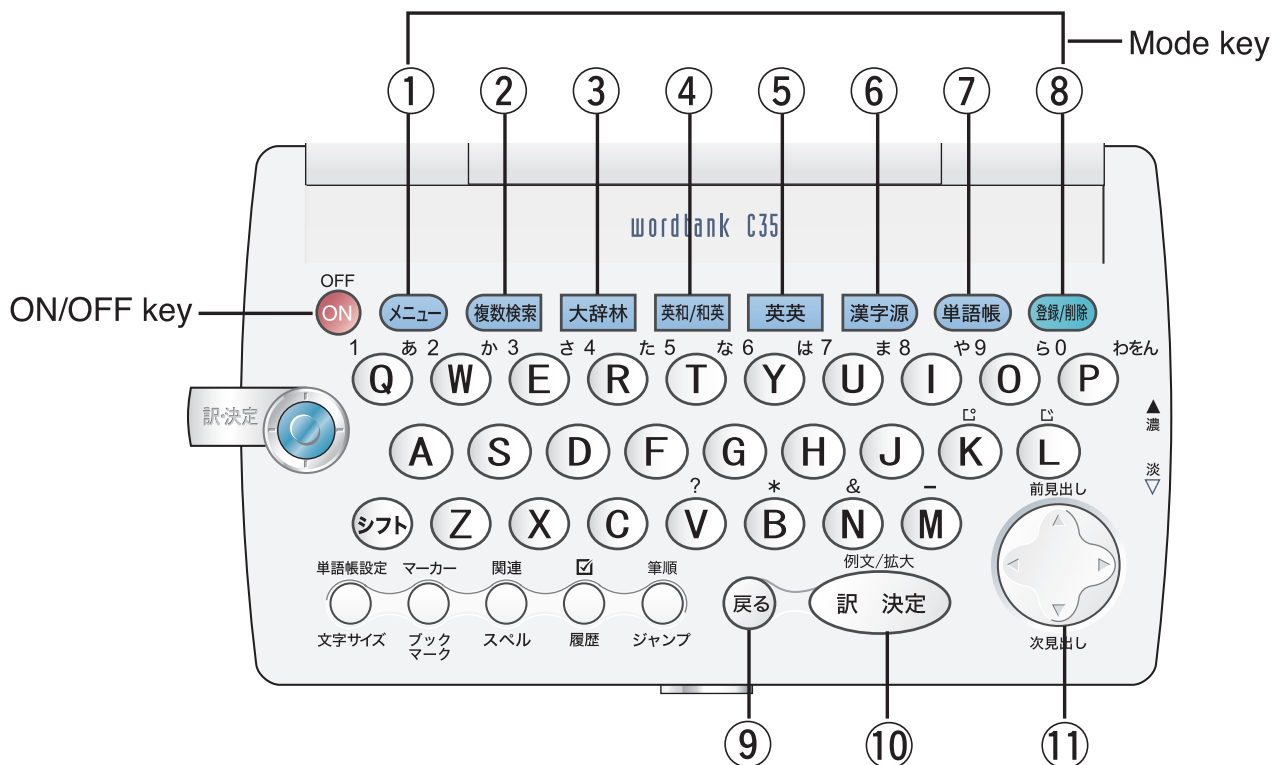

Keys and their functions



 
①	メニュー	Press to display the menu screen.
②	複数検索	Press to display the search screen for the multiple dictionary search.
③	大辞林	Press to display the search screen for the Super Daijirin (Japanese dictionary).
④	英和/和英	Press to display the search screen for the English-Japanese or Japanese-English dictionary. Each press of the key switches the screen of one dictionary to the other.
⑤	英英	Press to display the search screen for the English dictionary.
⑥	漢字源	Press to display the search screen for the Kanjigen.
⑦	単語帳	Press to display the initial screen for Wordmemo.
⑧	登録/削除	While a search result screen is displayed, press to register a displayed word to Wordmemo. While entering characters, press to delete the last character entered.
⑨	戻る	Press to go back to one screen at a time.
⑩	例文/拡大 訳 決定	Press to search for a word, phrase or translation or to perform various functions.
⑪	四方向キー	Press to move the cursor.

Basic operations

■ Turn on/off the unit


Press the  key to turn on the unit and the screen viewed last time will appear (resume feature). In another way, press any mode key of each dictionary to turn on the unit, and the initial screen of a chosen dictionary will be shown up. With the screen being turned on, press the  key to turn off the unit (The unit itself will automatically turn off to save energies/batteries in case it has not been used for a certain period <Auto power off function>.).

■ Move the cursor and select an item in the menu

Use the cursor keys to move the cursor from up to down to select an mode in the menu or to select the input box of the search screen. A chosen mode will be highlighted as seen on the right. On the menu screen, when a mode is selected and the  key is pressed, a search screen of a chosen mode will appear.

メニュー	《辞典コンテンツ2》	5/6
スーパー大辞林		
ジーニアス英和辞典第3版		
ジーニアス和英辞典第2版		
オックスフォード現代英英辞典		
古語辞典		
英語語義イメージ		
漢字源		
英会話とっさのひとこと辞典		





■ Search

Move the cursor to select an input box. Enter a searching word/phrase with the character input keys, and a list of matched entry words/phrases will be displayed. Select a matched word/phrase, and then press the  key to display the search result screen for the word/phrase.

ジーニアス和英	↑↓
読み	【けんしょう】
けんしょう【肩章】	
けんしょう【検証】	
けんしょう【憲章】	
けんしょう【顕彰】	
けんしょう【懸賞】	
けんじょう【献上】	
けんじょう【謙讓】	
げんしょう【現象】	
げんしょう【減少】	

* With a search result screen displayed, press the  key to change the text display size.

 
■ Scroll through the screen

The arrows  on the right side of the screen indicate that the contents of the screen cannot be fully displayed. Press the  key to scroll up or down one line at a time of the screen. With a result screen displayed, press the  key to scroll forward to the next screen of text, or press the  key to scroll backward to the previous screen of text. When a search

result screen is displayed, press the (シフト)▲ key to display the search result screen for the previous screen for the previous entry in the current dictionary, or press the (シフト)▼ key to display the search result screen for the next entry.

■ View example sentences, explanations or reference list

If 例文, 解説, EXAMPLE appears in the search result screen, press the (訳・決定) key to display the example sentence, explanation or reference. Press the (訳・決定) key again to hide the example sentence, explanation or reference.

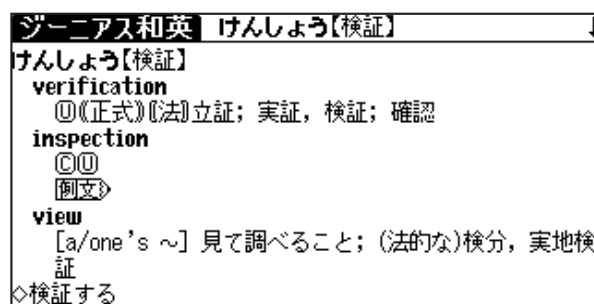 


■ Return to the list of matched entries

While a search result screen is displayed, press the (戻る) key to return to the list screen of matched entries.

■ View explanatory notes of dictionaries

If ⇨凡例 appears on the left side of the search screen of each dictionary screen, explanatory notes are available. Move the cursor on the search screen to select “ ⇨凡例 ”, and then press the (訳・決定) key to display the screen of the explanatory notes.

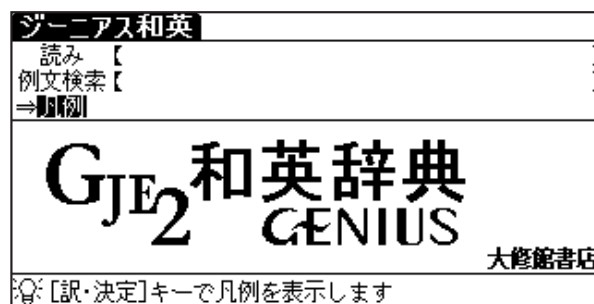

■ Tree structure list — Descriptions of [+] and [—] —

[+] in front of an item on the tree structure list indicates that the item contains sub-items. Select an item with [+] in front of it, and then press the (訳・決定) or ► key to display the list of sub-items.

Press the (戻る) or ◀ key to return to the condition before the sub-items were displayed. [—] in front of an item indicates that no sub-items are contained for the items.

* Switch the display language

 



 
At the Setup menu screen, the display language can be switched between Japanese and English. The Setup menu screen can be displayed from the Menu screen.

 
Using the Wordmemo

■ Register a word

 

 


With the search result screen of each dictionary displayed, press the  key to register the word currently displayed to the Wordmemo.

 
■ Use the Wordmemo

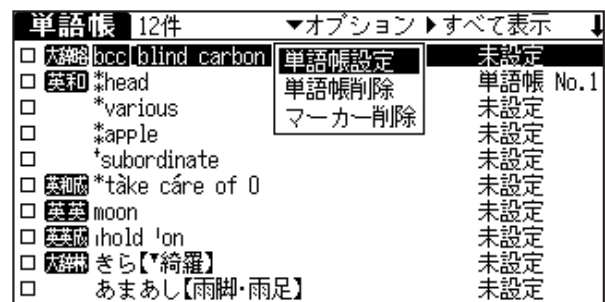- ① Press the  key to display the Wordmemo screen.
- ② Press the  key to display the “オプション” (“Options”) menu. At the menu, various settings for Wordmemo are available such as setting Wordmemo and deleting all registered words or markers at once.
- ③ After pressing the  key, press the  key to display the Wordmemo list. Select the number of the Wordmemo, and then press the  key to display the words only registered in the selected Wordmemo.

 
 
 





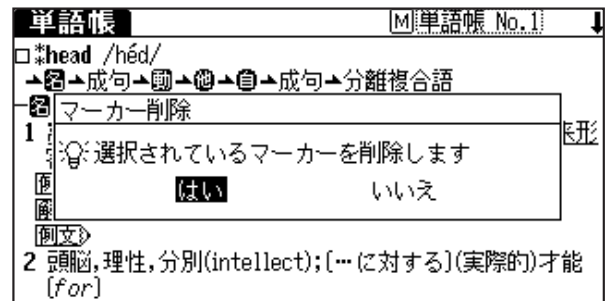 
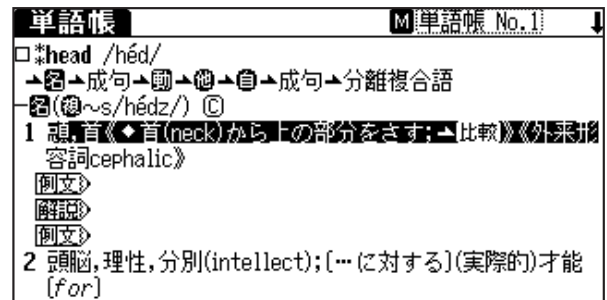 
■ Categorize words

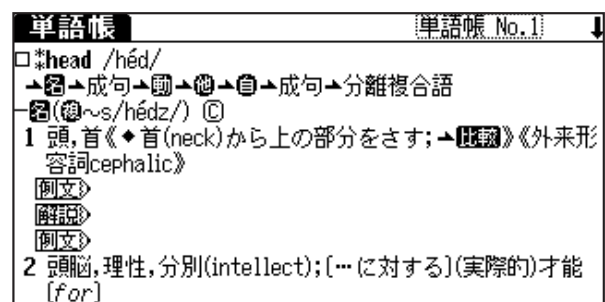- ① Select a word from the Wordmemo screen, and then press the  key to display the search result screen for the word.
 - ② Press the  key to display the category menu. Move the cursor to select a category number of Wordmemo, and then press the  key to categorize the displayed word into the selected Wordmemo.
- * At the Wordmemo screen, press the  key to put a check mark (☑) on the box next to an entry word. Press  key again to remove the check mark.





■ Use the Marker function

 
- ① Press the  key at the search result screen of Wordmemo, and then move the cursor to the beginning of a text to be underlined.
- ② Press the  key again, and then use the cursor keys to select the text. Press the  key to underline the selected text.
- ③ Press the  key, move the cursor to the underlined text, and then press the  key. When the message “選択されているマーカーを削除します” (“Do you want to delete this marker?”) appears, select “はい” (“Yes”) and press the  key to remove the underline.



■ Delete data from the Wordmemo


- ① Display the search result screen of a registered word to delete in Wordmemo, and then press the  key. The message “この単語を削除します” (“Delete word”) will appear.
- ② Select “はい” (“Yes”), and then press the  key to delete the displayed word from the Wordmemo.


* At the “Option” menu, all registered words can be deleted at once from the Wordmemo.

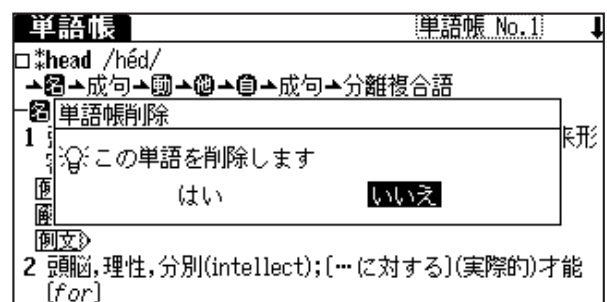



 
 
Useful functions

■ The multi-jump function

- ①With a search result screen displayed, press the  key to highlight an entry word. Move the cursor to select a word to search.

* In case having more than two letters to search, select the first letter, press the  key again, and move the cursor to select the other characters.

- ② Select the word and press the  key. Then, the list of dictionary jump selections will appear. Move the cursor to select a dictionary, and then press the  key to jump to the selected dictionary.

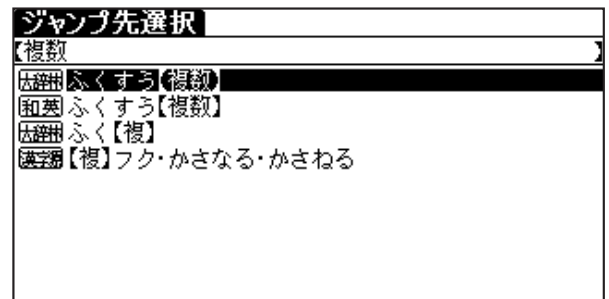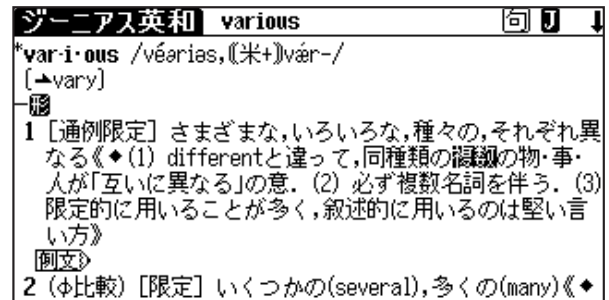

- * If a selected word is found only in one dictionary, the word will be directly shown at the jumped dictionary screen without having it displayed on the list of dictionary jump selections screen.
- * If ➡ appears in the screen, select ➡ to jump to the reference entry.

■ The wildcard search function

Entering an asterisk (***) or a question mark (*?*) allows to search for spellings or vaguely remembered words. In addition, putting an asterisk (***) at the beginning of a word or phrase makes it possible to search reversely for entry words that are generated from the word.


Example: Enter “chr * m” to search for a word beginning with “chr” and ending with “m”, such as “chrism” or “chrysanthemum”.

Enter “ * そら ” to search for a word or phrase ending in “ そら ”, such as “ あまつそら ” or “ うわのそら ”.



Enter “b?lieve” to search for “believe” without knowing whether the second letter is “i” or “e”.

(*) indicates unlimited number of letters, and (?) indicates a single letter.


■ The spell-check function


 
When an English word is entered in the input box of a search screen, press the  key to check the spelling of the word. A list of matched words with the same spelling or similar spellings will be displayed.

■ The history function

 
With the search screen of a dictionary or a search result screen displayed, press the  key to display the list of words previously searched in the dictionary. At the history list screen, press the key  to delete listed words.

■ The Bookmark function




 
 
① With a search result screen displayed, press the  key to bookmark a displayed word to the Bookmark list.

② With the search screen of a dictionary or a search result screen displayed, press the  key to display a list of bookmarked words in the dictionary. From the list, select a bookmarked word to display, and then press the  key to recall the word.

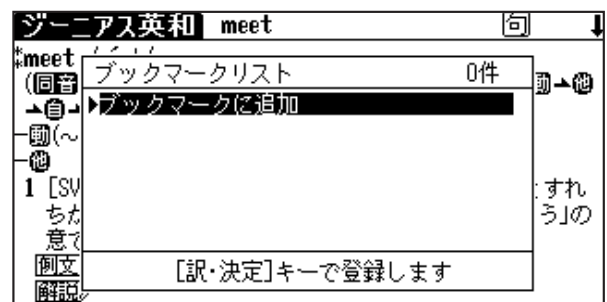③ With the Bookmark list displayed, press the  key to delete the selected entry from the Bookmark list.



■ The kanji stroke order

① If  appears in the search result screen of the Kanjigen (kanji dictionary), press the  key to switch to the stroke order screen and view the stroke order for a main entry character. To return to the search result screen, press the  key. In addition, if the  key is pressed while a search result screen of the Kanjigen or the Super Daijirin is displayed, each character will be enlarged. Move the cursor to select one character at a time to enlarge. Press the  key again to display the text at its original size.