


Before the initial use



◆ Insert the batteries

- ① Turn off the unit and position your thumbs on the arrows in the battery compartment cover located on the bottom of the unit. Push the cover to the direction of the arrows to remove the cover.
- ② Insert the two attached AAA-size batteries making sure that their poles (+ and -) point to the correct direction.

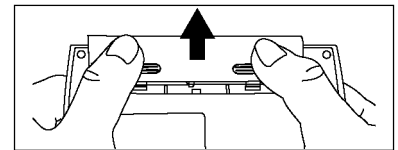


◆ Reset the unit

- ① Press the reset button on the bottom of the unit.
 - ② Press the open/close button while opening the top cover.
 - ③ Use the contrast adjustment dial on the right side of the unit to adjust the contrast of the display.
 - ④ The message 「システムを初期化しますか？」 (Do you want to reset?) appears, select 「はい」 (Yes), and then press the **訳 決定** button to initialize the unit.
- In a moment, the menu screen will appear and this unit will be ready to use.

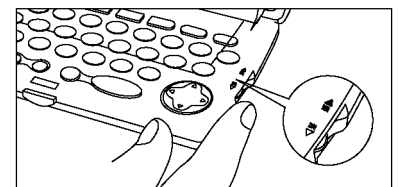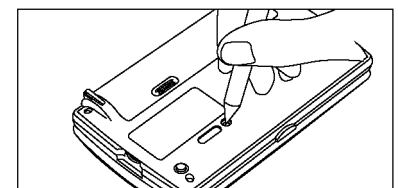

Key Functions

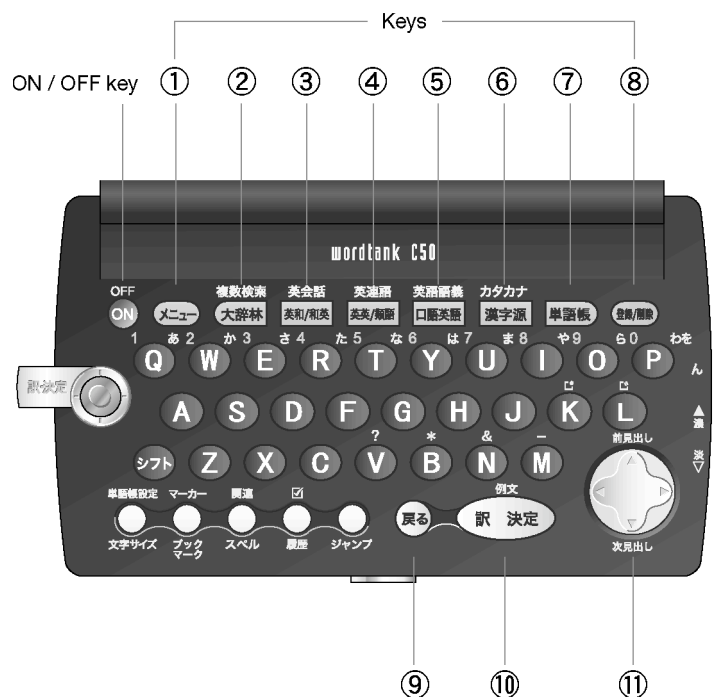

①	メニュー	Press to display the menu screen.
②	複数検索 大辞林	Press to display the Super Daijirin (Japanese Dictionary) search screen. Press シフト once, and then press 複数検索 大辞林 to display the multiple dictionary search.
③	英会話 英和/和英	Press to display the English-Japanese / Japanese-English Dictionary search screen. Each press of the key switches the screen of one dictionary to the other. Press シフト once, and then press 英会話 英和/和英 to display the English conversation search screen.
④	英連語 英英/英和	Press to display the English-English / Thesaurus search screen. Each press of the key switches the screen of one dictionary to the other. Press シフト once, and then press 英連語 英英/英和 to display the English Collocations Dictionary.
⑤	英語語義 口語英語	Press to display the Comprehensive Dictionary of Colloquial English search screen. Press シフト once, and then press 英語語義 口語英語 to display the Dictionary of English Word Images.
⑥	カタカナ 漢字源	Press to display the Kanji Dictionary search screen. Press シフト once, and then press カタカナ 漢字源 to display the Katakana New Words Dictionary.
⑦	単語帳	Press to display the initial screen for Wordmemo.
⑧	登録/削除	While a search result screen is displayed, press to register a displayed word to Wordmemo. While entering characters, press to delete the last character/s entered.



⑨	戻る	Press to go back to the previously displayed screens one at a time.
⑩	訳 訳 決定	Press to search for a word, phrase or translation or to perform various functions.
⑪	シフト	Press to move the cursor. At the search result screen, press シフト once, and then press the cursor key to display the previous/next entry.

 
Basic Operations


◆ Turn On/Off the unit

Press the  key to turn on the unit. The screen viewed last time will appear (resume function). In another way, press any mode key of each dictionary to turn on the unit, and the initial screen of a chosen dictionary will be shown up. With the screen being turned on, press  to turn off the unit. (The unit itself will automatically turn off to save energies/batteries in case it has not been used for a certain period. (Auto power off function).)


◆ Move the Cursor and Select an item in the Menu


Use the cursor keys to move the cursor up, down, from left to right to select an icon in the menu or to select the input box of the search screen. A chosen icon will be highlighted as seen on the right.


On the menu screen, when an icon of each dictionary is selected and  is pressed, a search screen of a chosen dictionary will appear.

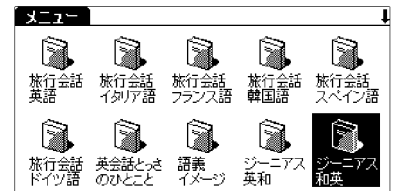




 
 


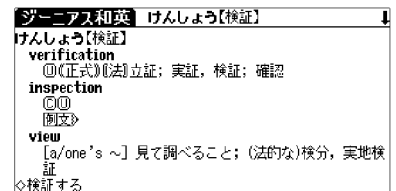

◆ Search

Move the cursor to select an input box. Enter a searching word or phrase with the character input keys, and a list of matched entry words/phrases will be displayed. Select a matched word/phrase, and then press  to display the search result screen for the word/phrase.




 
 

* With a search result screen displayed, press  to change the text display size.




◆ Scroll Screen

The arrows  on the upper-right corner of the screen indicate that the contents of the screen cannot be fully displayed. Press  /  to scroll up or down one line at a time of the screen. Press  to scroll forward to the next screen of text, or press  to scroll backward to the previous screen of text. When a search result screen is displayed, press   to display the search result screen for the previous screen for the previous entry in the current dictionary, or press   to display the search result screen for the next entry.

◆ Display Example Sentences, Explanations, or Reference

 
 

When , ,  or  appears on the search result screen, press  to display the example sentences, explanations, or reference. Press  again to hide them.

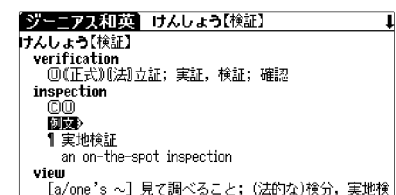


◆ Return to the list of matched entries

While a search result screen is displayed, press  to return to the list of matched entries.

◆ View Explanatory Note of Dictionaries

When  is displayed on the left side of the search screen of each dictionary, explanation notes are available. Move the cursor on the search screen, select  and press  to display the screen of the explanatory notes.

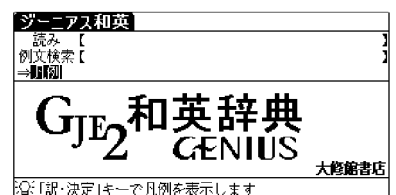

* Switch the Display Language

At the Setup menu screen, the display language can be switched between Japanese and English. The Setup menu screen can be displayed from the Menu screen.


Use the Wordmemo

◆Register a Word

① With the search result screen of each dictionary displayed, press to register the word currently displayed to the Wordmemo.


◆Use the Wordmemo

① Press to display the Wordmemo screen.
 ② After pressing and then , press to display the Wordmemo No. list. Select the Wordmemo No. to be displayed, and press to display the words only registered in the selected Wordmemo.
 * Press and the to display the option menu. Use the option menu to change the settings of the Wordmemo, or to delete all registered words and markers at once.

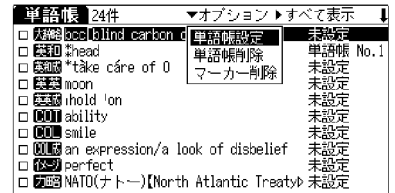



◆Categorize Words

① Select a word from the Wordmemo screen and then press to display the search result screen.
 ② Press once, and then press to display the category menu. Move the cursor to select a category number of Wordmemo, and then press to categorize the displayed word into the selected Wordmemo.
 * Press on the Wordmemo screen to put a check mark (✓) for an entry word. To delete the check mark, press again.

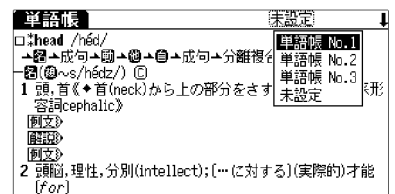

◆Use the Marker Function

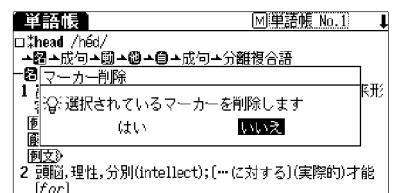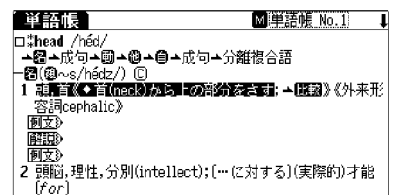

① Press at the search result screen of the Wordmemo. Move the cursor to the beginning of a text to be underlined.
 ② Press again, and extend the selected range with the cursor key. An underline is placed below the selected area when is pressed.
 ③ Press , and move the cursor to the underlined area. Press to display the message 「選択されているマーカーを削除します」 (Do you want to delete this marker?). Choose 「はい」 (Yes) and press to delete the underline.


 




◆Delete Data from the Wordmemo



Display the search result screen of a registered word to delete in Wordmemo, and then press . The message 「この単語を削除します」 (Delete this word from Wordmemo) will appear. To delete the displayed word from the Wordmemo, choose 「はい」 (Yes) and press . The entire registered words can be deleted at once by using the option menu.

Multi-Jump Function

① With a search result screen displayed, press  to highlight an entry word. Move the cursor to select a word to search. If the word has more than 2 letters, select the first letter, then press  again. And then, move the cursor to expand the selected range.

② Select the word and press . Then, the list of entry jump selections will appear. Move the cursor to select an entry, and jump to the dictionary by pressing . (When there is only one possible jump dictionary, jump options are not displayed and the jump is performed directly to the dictionary).

* When  is displayed in the screen, select  to jump to the reference entry.

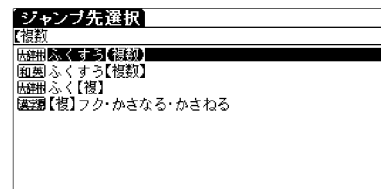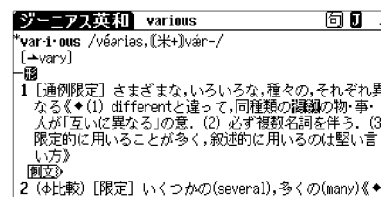**Wildcard Search Function**

Entering an asterisk “*” or a question mark “?” allows to search for spellings or vaguely remembered words. In addition, putting an asterisk “*” at the beginning of a word or phrase makes it possible to search reversely for entry words that are generated from the word.

Examples-


“chr*m” - Words starting with “chr” and ending with “m”, such as “chrism”, “chrysanthemum”, etc.

“*そら” - Words ending with “そら”, such as “あまつそら”, “うわのそら”, etc.



“b?lieve” - Unclear whether the second letter in “believe” is an “i” or “e”.

“* ” represents unlimited number of letters; “?” represents a single letter.


Spell-check Function


 
When an English word is entered in the input box at a search result screen, press  to check the spelling of the word. A list of matched words with the same spelling or similar spellings will be displayed.


History Function

With the search screen of a dictionary or a search result screen displayed, press  to display the list of words previously searched in the dictionary. At the history list screen, press  to delete listed words.

Bookmark Function

① Press  on the search result screen to bookmark the displayed text.

② With the search screen of a dictionary or a search result screen displayed, press  to display a list of bookmarked parts in the dictionary. From the list, select a bookmarked part to display, and then press  to recall the registered part.

③ To delete the registered part from the bookmark, press  on the bookmark list screen.

