


Before the initial use


◆Insert the batteries

- ① Turn off the unit and position your thumbs on the arrows in the battery compartment cover located on the bottom of the unit. Push the cover to the direction of the arrows to remove the cover.
- ② Insert the two attached AAA-size batteries making sure that their poles (+ and -) point to the correct direction.

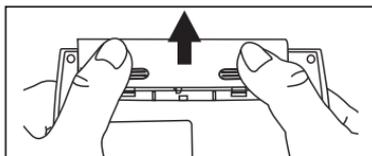


◆Reset the unit


- ① Press the reset button on the bottom of the unit.
- ② Press the open/close button while opening the top cover.
- ③ Use the contrast adjustment dial on the right side of the unit to adjust the contrast of the display.

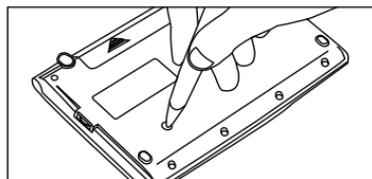

- ④ The message "タッチスクリーンの補正 ✕ をスタイラスでタップしてください" (Touch screen calibration, Please tap ✕ mark) is displayed. Used the stylus to tap the four ✕. After ✕ tapping, these disappear.

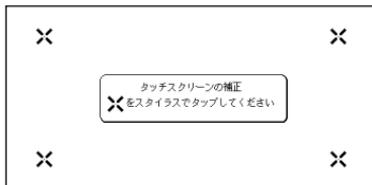

- ⑤ The message 「システムを初期化しますか？」(Do you want to reset?) appears, use the stylus to tap 「はい」(Yes) to initialize the unit. In a moment, the menu screen appears and this unit will be ready to use.

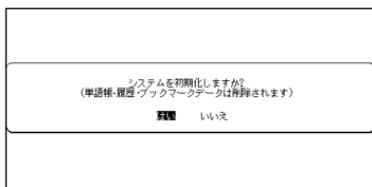

Key Functions



①		Press to display the menu screen.
②		Press to display the search screen for the multiple dictionary search.
③		Press to display the Super Daijirin (Japanese Dictionary) / Kanji Dictionary search screen. Each press of the key switches the screen of one dictionary to the other.
④		Press to display the search screen for the English-Japanese dictionary.

⑤		Press to display the search screen for the Japanese-English dictionary.
⑥		Press to display the search screen for the English dictionary.
⑦		Press to display the search screen for the English thesaurus dictionary.
⑧		Press to display the initial screen for Wordmemo.
⑨		While a search result screen is displayed, press to register a displayed word to Wordmemo. While entering characters, press to delete the last character/s entered.
⑩		Press to go back to the previously displayed screens one at a time.
⑪		Press to search for a word, phrase or translation or to perform various functions.
⑫		Press to move the cursor.

Basic Operations


◆ Turn On/Off the unit

Press the  key to turn on the unit. The screen viewed last time will appear (resume function).

In another way, press any mode key of each dictionary to turn on the unit, and the initial screen of a chosen dictionary will be shown up. With the screen being turned on, press  to turn off the unit (The unit itself will automatically turn off to save energies/batteries in case it has not been used for a certain period. [Auto power off function]).

◆ Move the Cursor and Select an item in the Menu


Use the cursor keys to move the cursor up, down, from left to right to select dictionary in the menu or to select the input box of the search screen. A chosen dictionary will be highlighted as seen on the right.

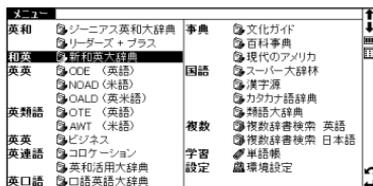

On the menu screen, when each dictionary is selected and  is pressed, a search screen of a chosen dictionary will appear.

◆ Search

Move the cursor to select an input box. Enter a searching word or phrase with the character input keys, and a list of matched entry words/phrases will be displayed on left side. The preview of a chosen entry word on the list is displayed on right side. Move the cursor to select entry word/phrases from the list and press  to display the search result screen for the word/phrase.

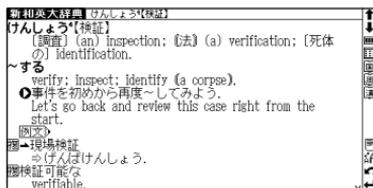

 to display the search result screen for the word/phrase.


* Press  to change the text display size.

◆ Scroll Screen

The arrows  on a screen indicate that the contents of the screen cannot be fully displayed. Press / to scroll up down one line at a time of the screen. When a search result screen is displayed, press  to scroll forward to the next screen of text or press  to scroll backward to the previous screen of text. When a list and preview is displayed, press  to display the previous list or press  to display next list of matched entry words/phrases. When a search result screen is displayed, press  to display the search result screen for previous entry or  to display the search result screen for next entry in the current dictionary.

◆ Display Example Sentences or Reference

When ,  or  appears on the search result screen, press  to display the example sentences or reference. Press  again to hide them.

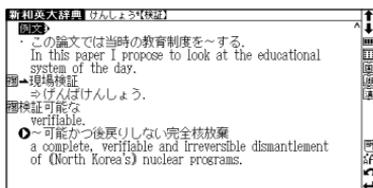

◆Return to the list of matched entries

While a search result screen is displayed, press  to return to the list of matched entries.

◆View Explanatory Note of Dictionaries

When ⇨ 凡例 is displayed on the left side of the search screen of each dictionary screen, explanation notes are available. Move the cursor on the search screen, select ⇨ 凡例 and press  to display the screen of the explanatory notes.




* Switch the Display Language

At the Setup menu screen, the display language can be switched between Japanese and English. The Setup menu screen can be displayed from the Menu screen.

Icons that appear in screens

Instead of by pressing keys, various operations can be performed by using the enclosed stylus to tap the icons that appear on the screen.

 Indicates that there are related words or phrases for the displayed entry.

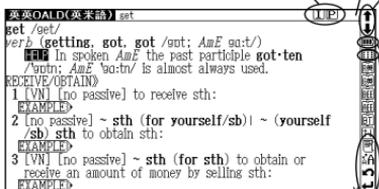

 Tap to display the previous or next screen of text that could not be displayed in the current screen.

 Tap to display the search result screen for the previous or next entry.

 Indicates the amount of power remaining in the batteries. As the power remaining in the batteries becomes low, fewer segments are displayed in the icon.

 Tap to display the history of dictionaries and modes that were displayed.

 Tap to display the menu screen.

 Tap to change the size of the characters displayed in the screens.

 Tap to display the previous screen.

 Tap to perform the same operation as if the  key is pressed, for example, selecting and performing functions.

Dictionary link icons

These icons indicate that the currently displayed entry word is also listed in other dictionaries.

Tap the icon to jump to the corresponding dictionary.

The icons displayed on the screen represent each dictionary as follows:

● When an English entry word is displayed



-  Genius Eng-Jpn
-  Reader's + Plus
-  ODE (British Eng-Eng)
-  NOAD (American Eng-Eng)
-  OALD (British and American Eng-Eng)
-  OTE (British English Thesaurus)
-  AWT (American English Thesaurus)
-  OXFORD Business
-  OXFORD Collocations
-  Eng-Jpn Collocations
-  Culture Guide
-  Concise Encyclopedia
-  Concise Katakana
-  Super Daijirin abbreviation search
-  Concise Katakana abbreviation search


 Tap to display the icons that

could not be displayed in the current screen.

● When a Japanese entry word is

-  Super Daijirin
-  Japanese Thesaurus
-  New Jpn-Eng
-  Concise Katakana

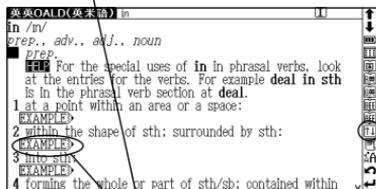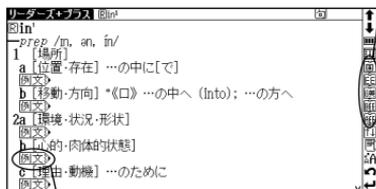

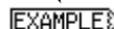   When any of the above icons appear in the search result screen, example sentences or referenses for the entry word can be displayed.

Use the Wordmemo

◆ Register a Word

With the search result screen of each dictionary displayed, press





to register the word currently displayed to the Wordmemo.

◆ Use the Wordmemo

- ① Press to display the Wordmemo screen.
- ② After pressing , press to display the Wordmemo No. list. Select the Wordmemo No. and press to display the words only registered in the selected Wordmemo.

* Press to display the option menu. Use the option menu to change the settings of the Wordmemo, or to delete all registered words and markers at once.

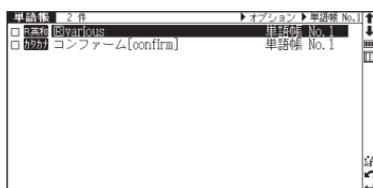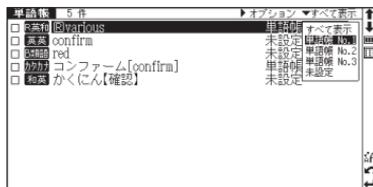


◆ Categorize Words

- ① Select a word from the Wordmemo screen and then press to display the search result screen.
- ② Press to display the category menu.

Move the cursor to select a

category number of Wordmemo, and then press to categorize the displayed word into the selected Wordmemo.

* Press on the Wordmemo screen to put a check mark (✓) for an entry word. To delete the check mark, press again.


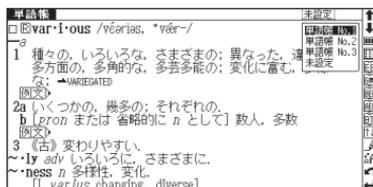


◆ Use the Marker Function

① Press  at the search result screen of the Wordmemo. Move the cursor to the beginning of a text to be underlined.

② Press  again, and extend the selected range with the cursor key. An underline is placed below the selected area when  is pressed.

③ Press , and move the cursor to the underlined area. When the message 「選択されているマーカーを削除します」 (Do you want to delete this marker?) appears, choose 「はい」 (Yes) and press  to delete the underline.

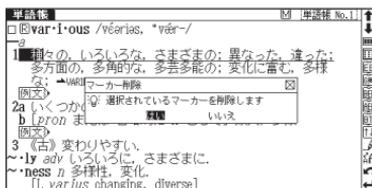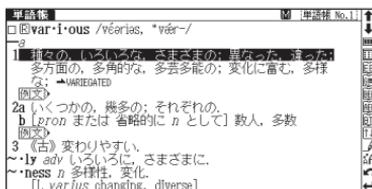

◆ Delete Data from the Wordmemo


Display the search result screen of a registered word to delete in Wordmemo, and then press . The message 「この単語を削除します」 (Delete this word from Wordmemo) will appear. To delete the displayed word from the Wordmemo, choose 「はい」 (Yes) and press .

The entire registered words can be deleted at once by using the option menu.


Useful Functions

Multi-Jump Function

- ① With a search result screen displayed, press **ジャンプ** to highlight an entry word. Move the cursor to select a word to search. If the word has more than 2 letters, select the first letter, then press **ジャンプ** again. And then, move the cursor to expand the selected range.

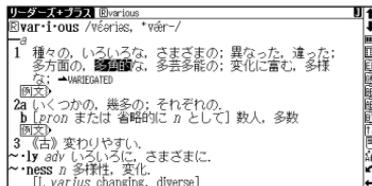

- ② Select the word and press **辞・典**. Then, the list of entry jump selections will appear. Move the cursor to select an entry, and jump to the dictionary by pressing **辞・典** (When there is only one possible jump dictionary, jump options are not displayed and the jump is performed directly to the dictionary).

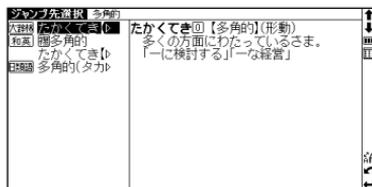

- * When **辞** is displayed in the screen, select **辞** to jump to the reference entry .

Wildcard Search Function

Entering an asterisk “*” or a question mark “?” allows to search for spellings or vaguely remembered words. In addition, putting an asterisk “*” at the beginning of a word or phrase makes it possible to search reversely for entry words that are generated from the word.

