 


QUICK REFERENCE

Before the initial use

■ Insert the batteries

 
- ① Turn off the unit, and then position your thumbs on the arrows in the battery compartment cover located on the bottom of the unit. Push the cover to the direction of the arrows to remove the cover.

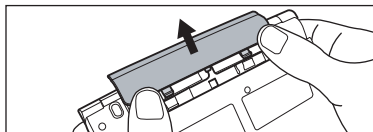

- ② Insert the two attached batteries, making sure that their poles (+ and -) point to the correct direction.

■ Reset the unit

- ① Press the reset button on the bottom of the unit.

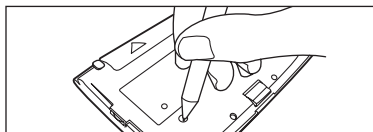


- ② Press the open/close button while opening the top cover.

- ③ Use the contrast adjustment dial on the right side of the unit to adjust the contrast of the display.




 - ④ The message “タッチスクリーンの補正
✕をスタイラスでタップしてください”
("Touch screen calibration, Please tap
✕ mark") is displayed. Use the stylus to
tap the four ✕. After tapping, these ✕
disappear.

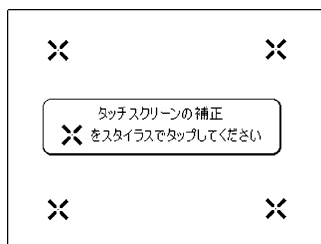

 - ⑤ When the message “システムを初期化しますか？” ("Do you want to reset?") appears, use the stylus to tap “はい” ("Yes") to reset the unit. In a short time, the menu screen appears and this unit will be ready to use.

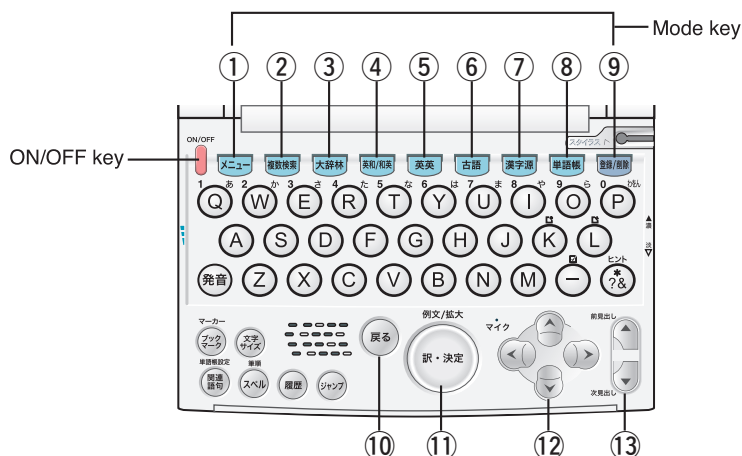

Keys and their functions




①	メニュー	Press to display the menu screen.
②	複数検索	Press to display the search screen for the multiple dictionary search.
③	大辞林	Press to display the search screen for the Super Daijirin (Japanese dictionary).
④	英和/和英	Press to display the search screen for the English-Japanese or Japanese-English dictionary. Each press of the key switches the screen of one dictionary to the other.
⑤	英英	Press to display the search screen for the English dictionary.
⑥	古語	Press to display the search screen for the Kogo dictionary.
⑦	漢字源	Press to display the search screen for the Kanjigen.
⑧	単語帳	Press to display the initial screen for Wordmemo.
⑨	登録/削除	While a search result screen is displayed, press to register a displayed word to Wordmemo. While entering characters, press to delete the last character entered.
⑩	戻る	Press to go back to one screen at a time.
⑪	検索・決定	Press to search for a word, phrase or translation or to perform various functions.
⑫	方向キー	Press to move the cursor.
⑬	前表示/次表示	Press to display the previous/next entry while having the search result screen displayed. Press to move to the previous/next page through the entry list screen.

 
Basic operations

■ Turn on/off the unit


Press the  key to turn on the unit and the screen viewed last time will appear (resume feature). In another way, press any mode key of each dictionary to turn on the unit, and the initial screen of a chosen dictionary will be shown up. With the screen being turned on, press the  key to turn off the unit. (The unit itself will automatically turn off to save energies/batteries in case it has not been used for a certain period (Auto power off function).)


■ Move the cursor and select an item in the menu


Use the cursor keys to move the cursor from up to down to select a mode in the menu or to select the input box of the search screen. A chosen mode will be highlighted as seen on the right. On the menu screen, when a mode is selected and the  key is pressed, a search screen of a chosen mode will appear.

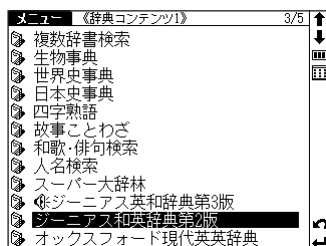






■ Search

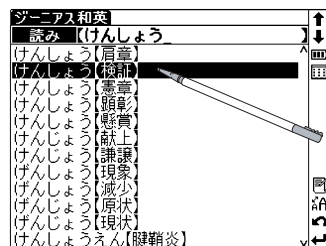 

Move the cursor to select an input box. Enter a searching word/phrase with the character input keys, and a list of matched entry words/phrases will be displayed. Select a matched word/phrase, and then press the  key to display the search result screen for the word/phrase.

*With a search result screen displayed, press the  key to change the text display size.





 
■ Scroll through the screen

The arrows  on the right side of the screen indicate that the contents of the screen cannot be fully displayed. Press the  /  key to scroll up or down one line at a time of the screen. Press the  key to scroll forward to the next screen of text, or press the  key to scroll backward to the previous screen of text. When a search result screen is displayed, press


the  key to display the search result screen for the previous screen for the previous entry in the current dictionary, or press the  key to display the search result screen for the next entry.

■ View example sentences, explanations or reference list


If **例文**, **解説**, **EXAMPLE** appears in the search result screen, press the  key to display the example sentence, explanation or reference. Press the  key again to hide the example sentence, explanation or reference.

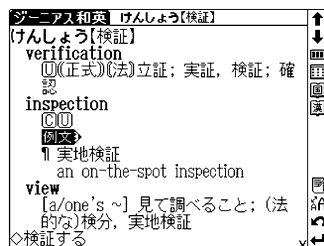


■ Return to the list of matched entries

  
 


While a search result screen is displayed, press the  key to return to the list screen of matched entries.

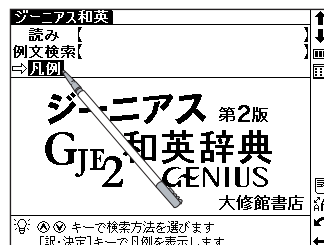

 
■ View explanatory notes of dictionaries

If **凡例** appears on the left side of the search screen of each dictionary screen, explanatory notes are available. Move the cursor on the search screen to select “ **⇒凡例** ”, and then press the  key to display the screen of the explanatory notes.



■ Tree structure list — Descriptions of and —

 in front of an item on the tree structure list indicates that the item contains sub-items. Select an item with  in front of it, and then press the  or  key to display the list of sub-items.

Press the  or  key to return to the condition before the sub-items were displayed.  in front of an item indicates that no sub-items are contained for the items.

- When using the stylus, tapping an item displays a list of sub-items. Tapping the same item again returns to the condition before the sub-items were displayed.

* Switch the display language

 
At the Setup menu screen, the display language can be switched between Japanese and English. The Setup menu screen can be displayed from the Menu screen.

Icons that appear in screens

Instead of by pressing keys, various operations can be performed by using the enclosed stylus to tap the icons that appear on the screen.



Indicates that there are related words or phrases for the displayed entry.

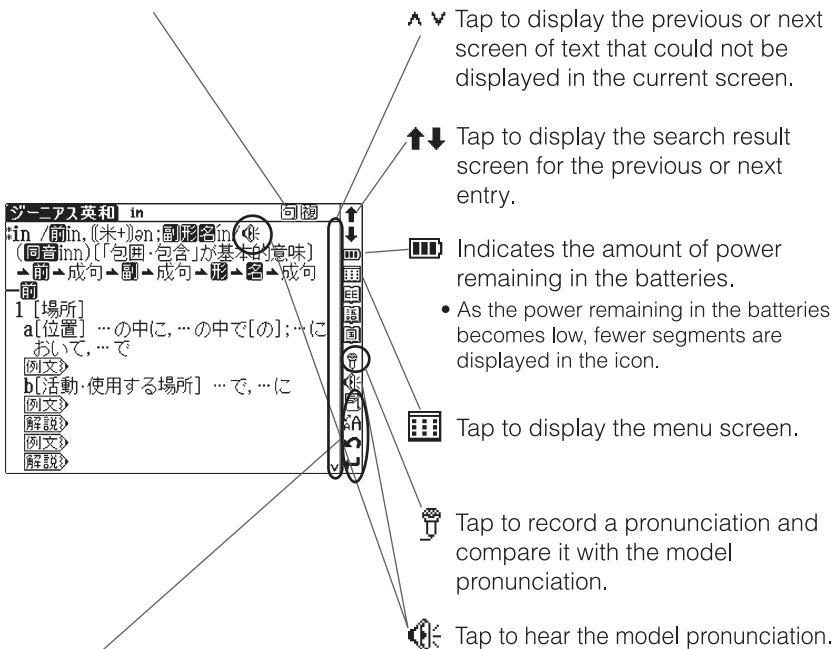

Tap to display the history of dictionaries and modes that were displayed.

Tap to change the size of the characters displayed in the screens.

Tap to display the previous screen.





Tap to perform the same operation as if the key is pressed, for example, selecting and performing functions.

Dictionary link icons







These icons indicate that the currently displayed entry word is also listed in other dictionaries. Tap the icon to jump to the corresponding dictionary.


The icons displayed on the screen represent each dictionary as follows:

- When an English entry word is displayed

-  English-English dictionary
-  English-Japanese dictionary
-  Dictionary of English Word Images
-  Super Daijirin abbreviation search

- When a Japanese entry word is displayed

 -  Super Daijirin (Japanese dictionary)
-  Japanese-English dictionary
-  Kogo Dictionary
-  Kanjigen
-  A Dictionary of Proverbs and Sayings
-  A Dictionary of Four-Kanji Phrases

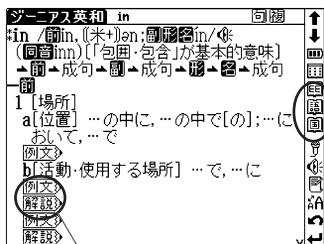



When any of the above icons appear in the search result screen, example sentences or explanations for the entry word can be displayed.


Using the Wordmemo

■ Register a word

With the search result screen of each dictionary displayed, press the  key to register the word currently displayed to the Wordmemo.

■ Use the Wordmemo


① Press the  key to display the Wordmemo screen.



② Press the  key to display the “オプション” (“Options”) menu. At the menu, various settings for Wordmemo are available such as setting Wordmemo and deleting all registered words or markers at once.

 
③ After pressing the  key, press the  key to display the Wordmemo list. Select the number of the Wordmemo, and then press the  key to display the words only registered in the selected Wordmemo.





■ Categorize words


 


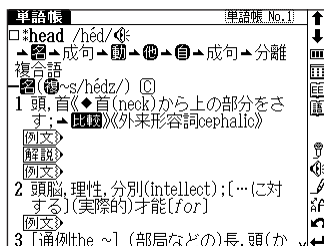

① Select a word from the Wordmemo screen, and then press the  key to display the search result screen for the word.

 
② Press the  key to display the category menu. Move the cursor to select a category number of Wordmemo, and then press the  key to categorize the displayed word into the selected Wordmemo.





* At the Wordmemo screen, press the  key to put a check mark (☑) on the box next to an entry word. Press  key again to remove the check mark.


■ Use the Marker function

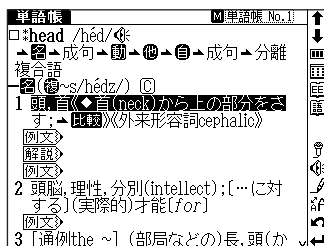- Press the  key at the search result screen of Wordmemo, and then move the cursor to the beginning of a text to be underlined.
- Press the  key again, and then use the cursor keys to select the text. Press the  key to underline the selected text.
- Press the  key, move the cursor to the underlined text, and then press the  key. When the message “選択されているマーカーを削除します” (“Do you want to delete this marker?”) appears, select “はい” (“Yes”) and press the  key to remove the underline.



■ Delete data from the Wordmemo

 
- Display the search result screen of a registered word to delete in Wordmemo, and then press the  key. The message “この単語を削除します” (“Delete word”) will appear.
- Select “はい” (“Yes”), and then press the  key to delete the displayed word from the Wordmemo.

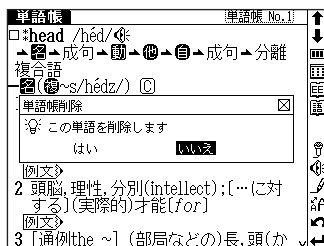




* At the “Option” menu, all registered words can be deleted at once from the Wordmemo.

Useful functions

■ The multi-jump function

 
 
- ① With a search result screen displayed, press the  key to highlight an entry word. Move the cursor to select a word to search.

*In case having more than two letters to search, select the first letter, press the  key again, and move the cursor to select the other characters.

- ② Select the word and press the  key. Then, the list of dictionary jump selections will appear. Move the cursor to select a dictionary, and then press the  key to jump to the selected dictionary.

* If a selected word is found only in one dictionary, the word will be directly shown at the jumped dictionary screen without having it displayed on the list of dictionary jump selections screen.

* If ➞ appears in the screen, select ➞ to jump to the reference entry.

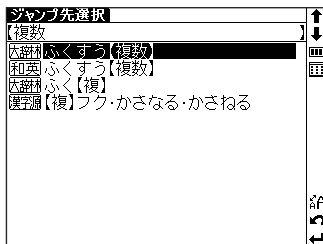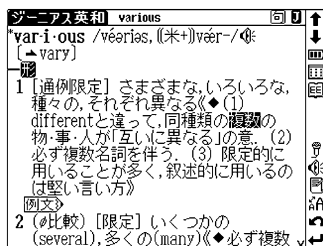

■ The wildcard search function

Entering an asterisk (*) or a question mark (?) allows to search for spellings or vaguely remembered words. In addition, putting an asterisk (*) at the beginning of a word or phrase makes it possible to search reversely for entry words that are generated from the word.


Example: Enter “chr * m” to search for a word beginning with “chr” and ending with “m”, such as “chrism” or “chrysanthemum”.

Enter “ * そら ” to search for a word or phrase ending in “ そら ”, such as “ あまつそら ” or “ うわのそら ”.



Enter “b?lieve” to search for “believe” without knowing whether the second letter is “i” or “e”.

 
(*) indicates unlimited number of letters, and (?) indicates a single letter.

■ The spell-check function





When an English word is entered in the input box of a search screen, press the  key to check the spelling of the word. A list of matched words with the same spelling or similar spellings will be displayed.

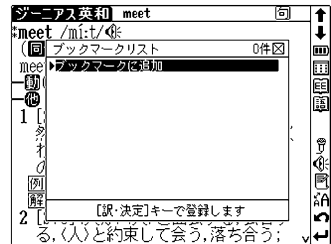■ The history function






With the search screen of a dictionary or a search result screen displayed, press the  key to display the list of words previously searched in the dictionary. At the history list screen, press the key  to delete listed words.



■ The Bookmark function

- ① With a search result screen displayed, press the  key to bookmark a displayed word to the Bookmark list.
- ② With the search screen of a dictionary or a search result screen displayed, press the  key to display a list of bookmarked words in the dictionary. From the list, select a bookmarked word to display, and then press the  key to recall the word.
- ③ With the Bookmark list displayed, press the  key to delete the selected entry from the Bookmark list.





■ The kanji stroke order




- ① If  appears in the search result screen of the Kanjigen (kanji dictionary), press the  key to switch to the stroke order screen and view the stroke order for a main entry character. To return to the search result screen, press the  key. In addition, if the  key is pressed while a search result screen of the Kanjigen or the Super Daijirin is displayed, each character will be enlarged. Move the cursor to select one character at a time to enlarge. Press the  key again to display the text at its original size.

Pronunciation/Recording function


 
 

This unit contains model pronunciations of about 14,000 essential words in the English-Japanese dictionary and of about 3,000 sample sentences in the English Conversation Dictionary. You can record your pronunciation and compare it with the model pronunciation.

■ Checking the pronunciation

When  appears after the phonetic sign in the search result screen of the English-Japanese dictionary or when  appears at the beginning of the sample sentence in the English Conversation Dictionary, press the  key to hear the pronunciation of the entry word or sample sentence. With the stylus, double-tap  in the search result screen.

 
- If there are multiple pronunciations for a head word, when the pronunciation differs depending on the part of speech, or when there are pronunciations for multiple sample sentences in the same screen,  appears only as far as the same number as the collected number of pronunciations. Press the  key or use the stylus to tap  on the right side of the screen to play all of the pronunciations.

- Using the Jump key to check the pronunciation


Press the  key and move the cursor to select . When the  or  key is pressed, the pronunciation is played.

■ Recording a pronunciation to compare it

1. Use the stylus to tap  on the right side of a search result screen. While the message “発音中” (“Playing...”) is displayed, the model pronunciation is played. Then, the message “録音中” (“Recording...”) appears and recording begins so that you can pronounce the word or sentence.

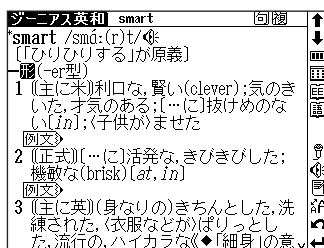

- After about one minute, recording ends and the recorded pronunciation is automatically played while the message “発音比較中” (“Recording...”) is displayed.
- When the pronunciation comparison is finished, the message “音声比較を続けますか?” (“Do you want to continue to compare?”) appears. To listen to the recorded pronunciation again, select “はい” (“Yes”), and then press the  key. If “いいえ” (“No”) is selected, the pronunciation comparison is ended and the search result screen is displayed.

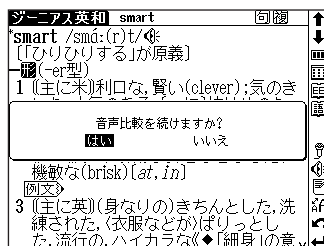 


- The recorded pronunciation is erased when the pronunciation comparison is finished. It cannot be saved.

Study with pronunciation function

■ English Words Target dictation

 
1. When a test screen of English Words Target dictation is displayed, the pronunciation of the word or sample sentence is played.
2. Use the character keys to type in the spelling of the word. Only the correct spelling can be typed in.

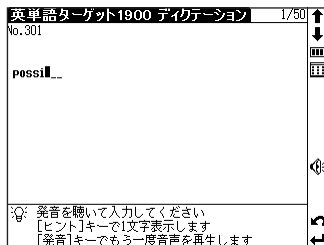

- To play the pronunciation again, press the **発音** key.
- Press the **ヒント** key to display a hint of one letter of the word or one word of the sample sentence.
- After entering the spelling, the message "OK" appears together with the reference number. To display the reference screen of English Words Target, press the **関連情報** key. To return to the dictation screen from the reference screen, press the **戻る** key.

■ Center exam - Listening

 1. When a test screen of Center exam – Listening is displayed, the pronunciation is automatically played.
2. Use the character keys to type in the number of the answer from the choices that appear in the screen. When the confirmation message appears, select "はい" ("Yes") to confirm the selected answer, and then press the **答・決定** key.

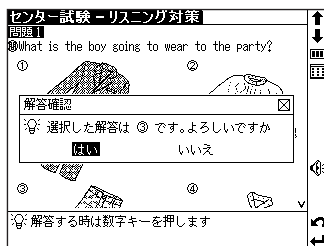

- While the training mode has been selected, the correct answer or an explanation appears after the **答・決定** key is pressed. While the test mode has been selected, the screen with the next question appears after the **答・決定** key is pressed.
- While the training mode has been selected, press the **発音** key to play the pronunciation again.
- 3. While the test mode has been selected, the test results screen appears after all test questions have been answered. Press the **関連情報** key to display a reference explanation list for each question.